
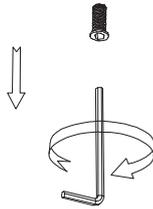


1

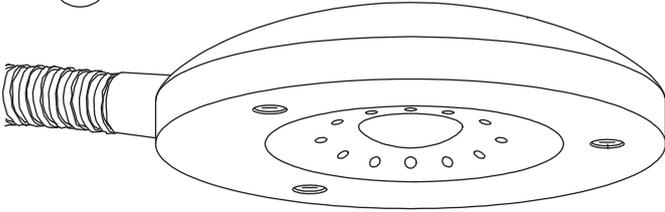


Loosen the hexagonal machine screws of the reflector with a hexagonal wrench and remove the reflector

TOOL

a hex machine wrench

2

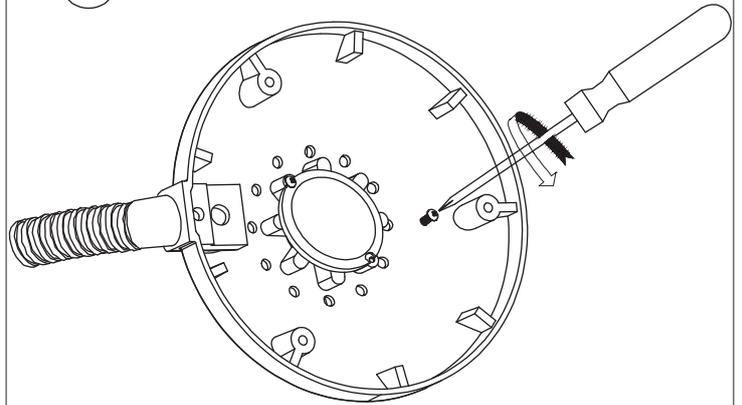


Loosen the screws with a screwdriver

TOOL

screwdriver

3

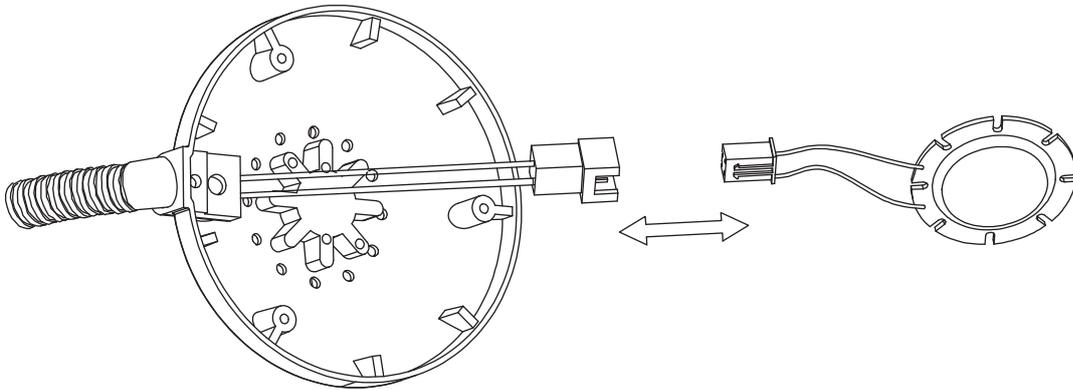

TOOL

screwdriver