


① Open the cover


Loosen the screws
on the PC cover
and open it

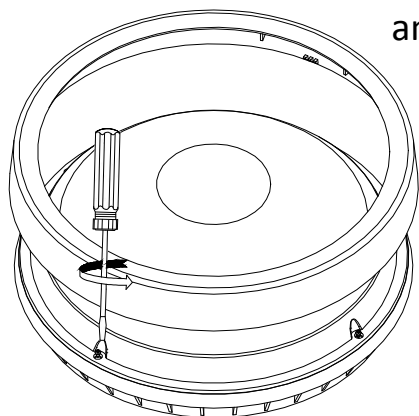

TOOL Screwdriver


②

loosen the fastening screw on
the PC diffuser
loosen the fastening
screw on the LED board

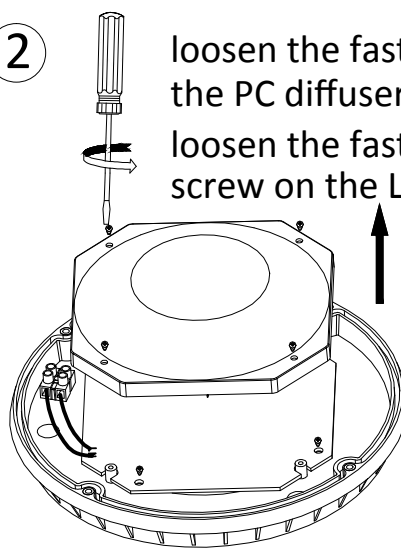


TOOL Screwdriver

③ remove the LED board

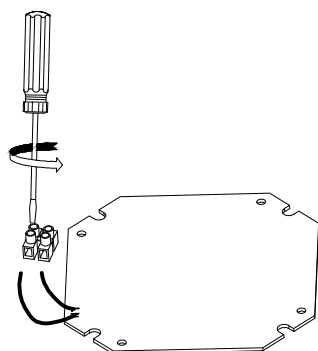

TOOL Screwdriver


④ install a new LED board

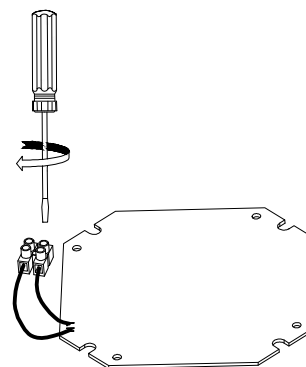

TOOL Screwdriver

⑤


Fix the LED board and PC
diffuser with screws

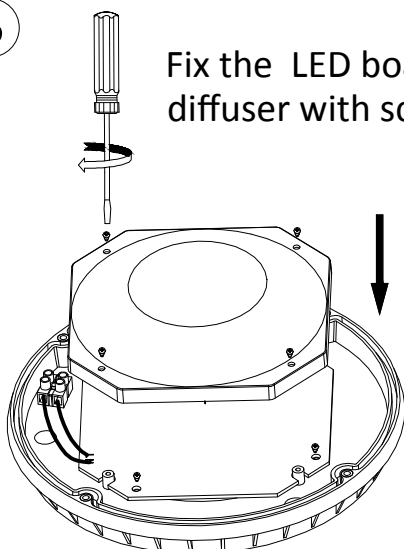

TOOL Screwdriver

⑥

Fix the PC cover with screws

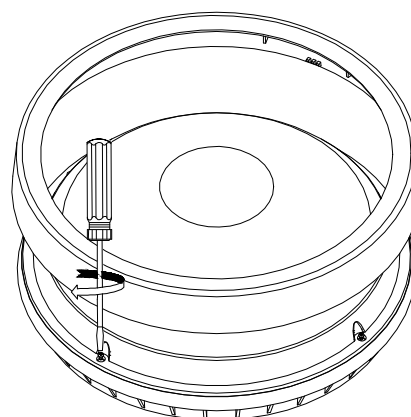

Close the
lamp cover

TOOL Screwdriver