
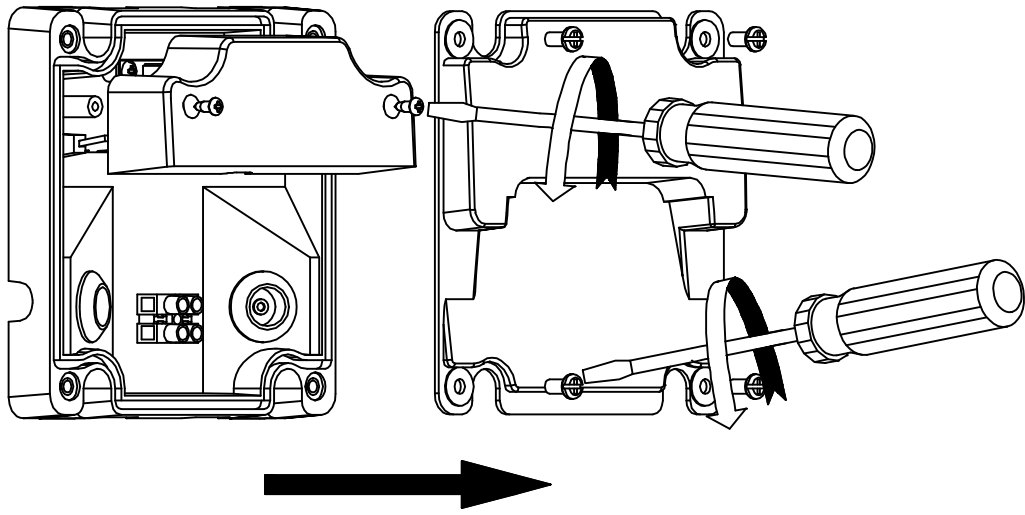


- 1

Open the lamp cover
- 2

Loosen the screws on the inner and outer PC cover

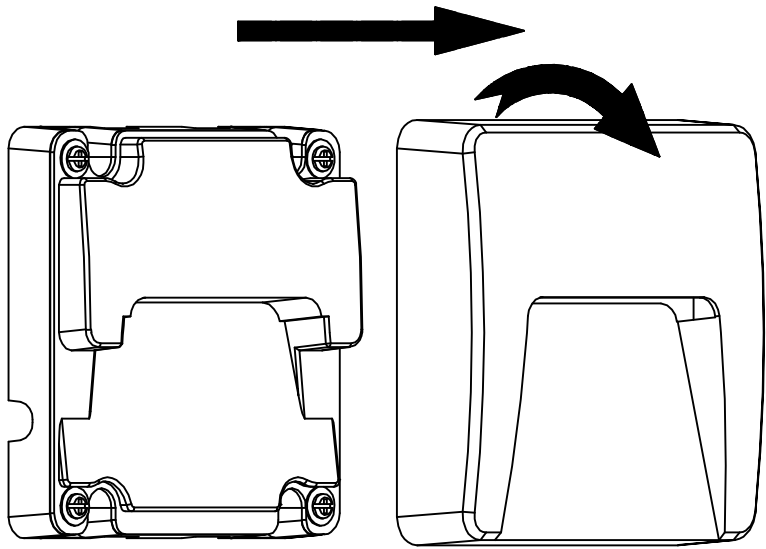


TOOL Screwdriver

TOOL Screwdriver

- 3


Loosen the screws on the LED module

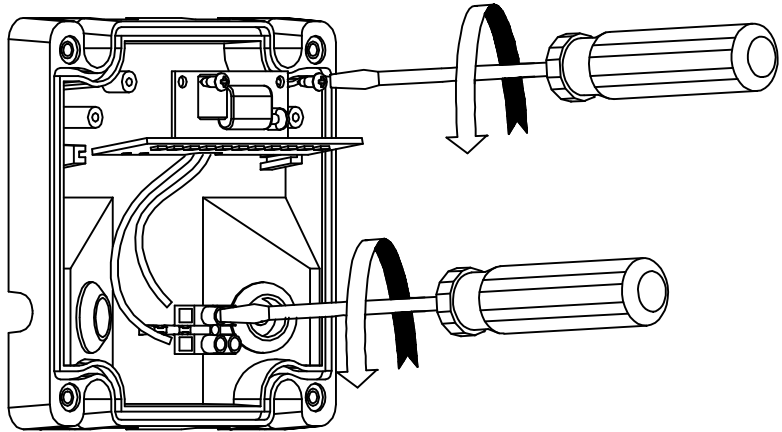

Take out the blue and brown wire from the terminal block

- 4

Fix the new LED module with screws

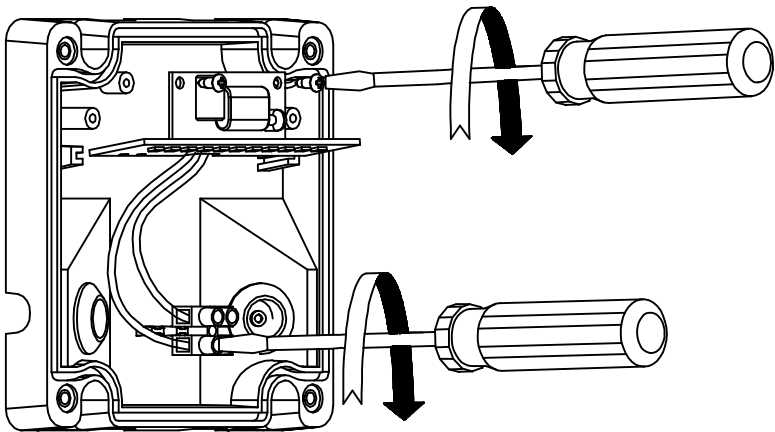


Connect the blue and brown wire to the terminal block

TOOL Screwdriver

TOOL Screwdriver


- 5

Fix the inner and outer PC cover with screws

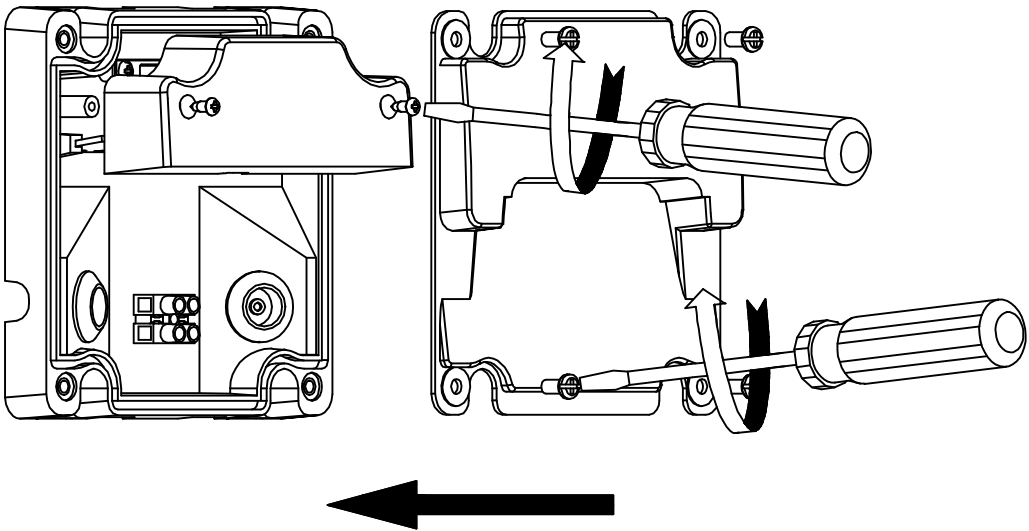

- 6

Re-attach the lamp cover by clicking it into place

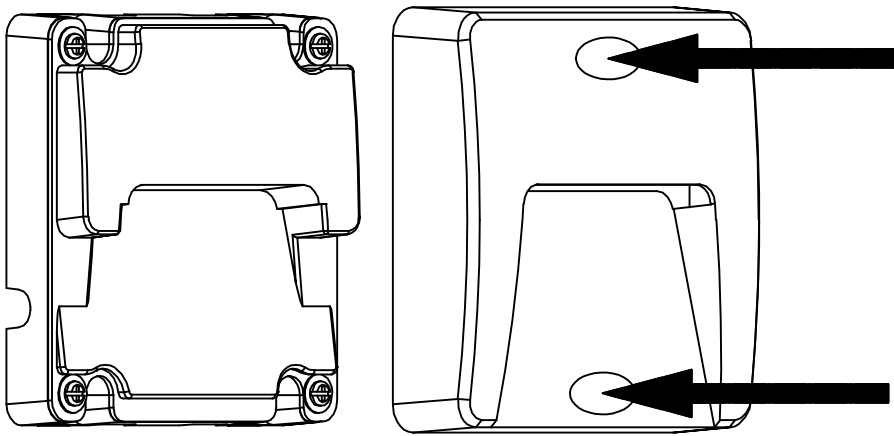

TOOL Screwdriver

TOOL Screwdriver