



1 Open the lamp cover

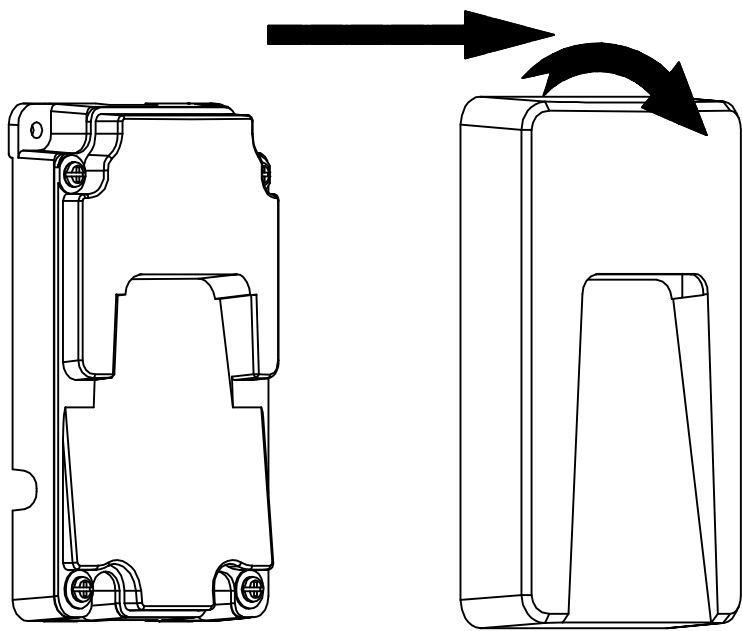


TOOL Screwdriver

2 Loosen the screws on the inner and outer PC cover

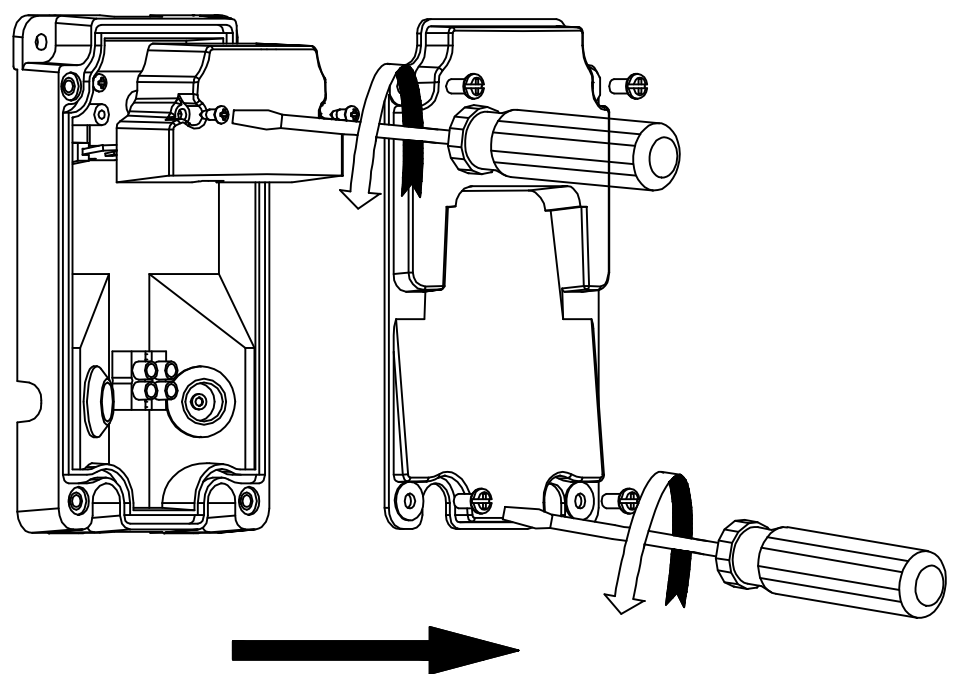

TOOL Screwdriver


3 Loosen the screws on the LED module

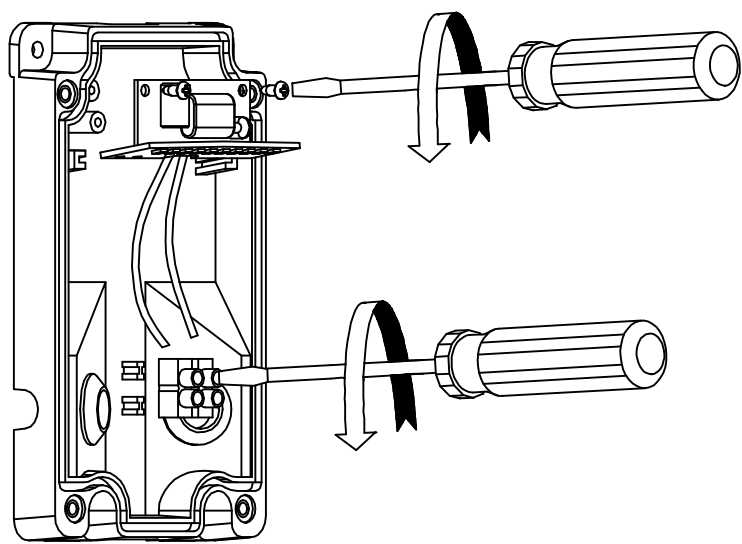

Take out the blue and brown wire from the terminal block

TOOL Screwdriver


4 Fix the new LED module with screws

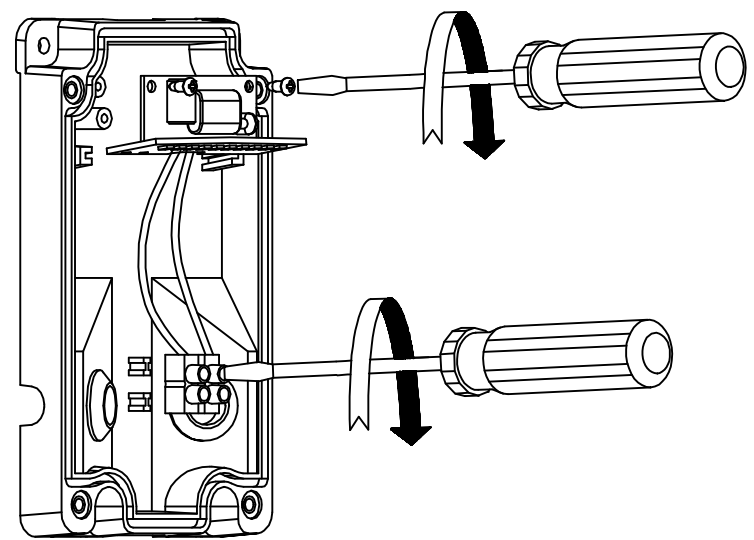

Connect the blue and brown wire to the terminal block


TOOL Screwdriver

5 Fix the inner and outer PC cover with screws

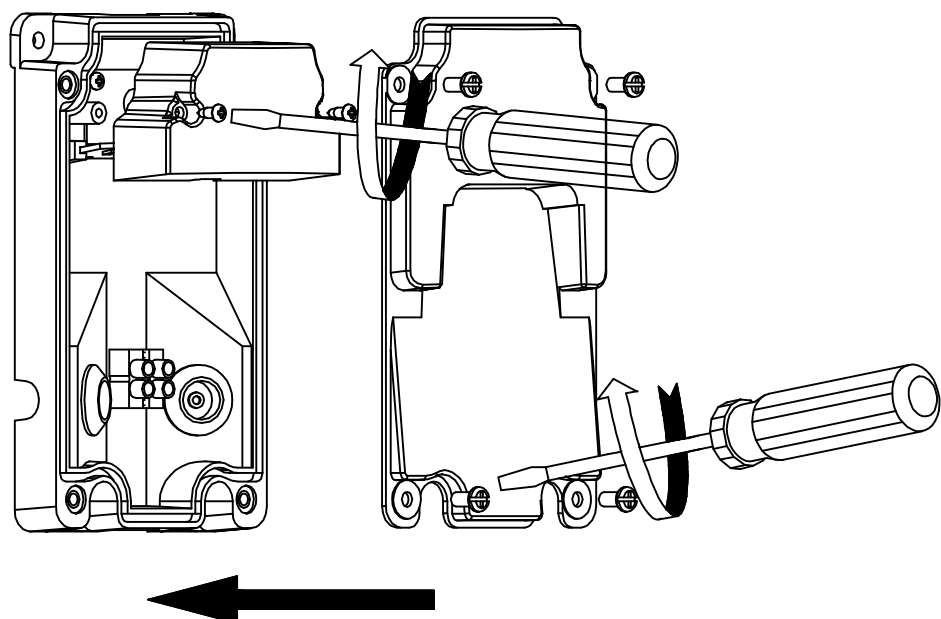

TOOL Screwdriver

6 Re-attach the lamp cover by clicking it into place

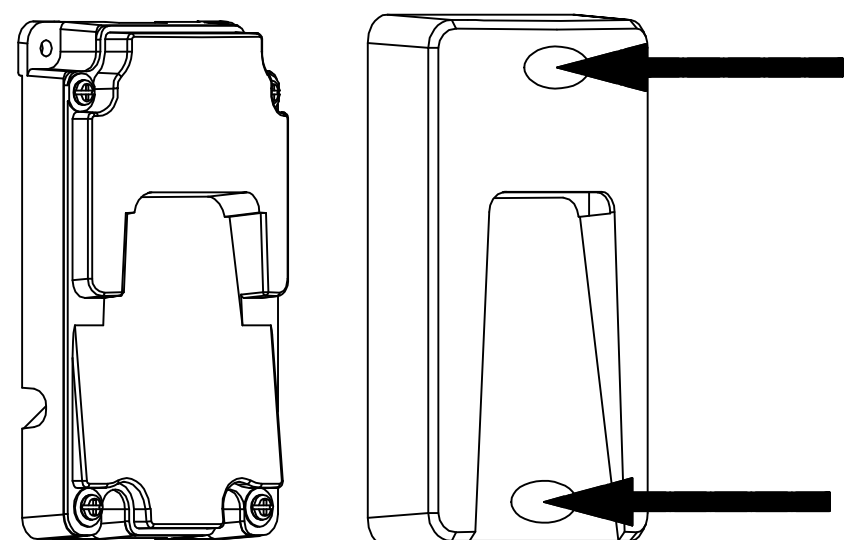

TOOL Screwdriver