



- ① Loosen the screw on the outside of the housing  
Remove the cover

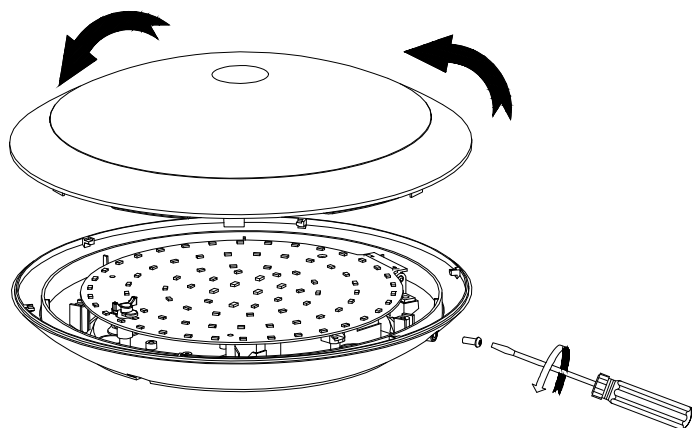


TOOL Screwdriver

- ② Loosen the screw on the LED board  
Remove the thumbscrews

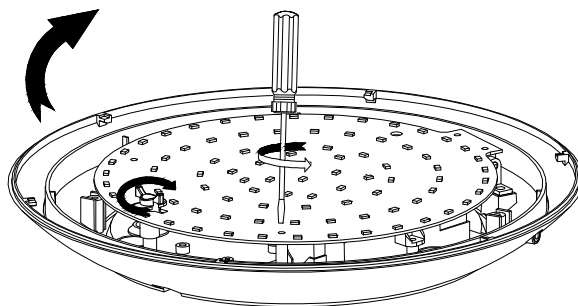


TOOL Screwdriver

- ③ Take out the LED board. Remove the black and red + blue and brown (LN) wires from the sensor

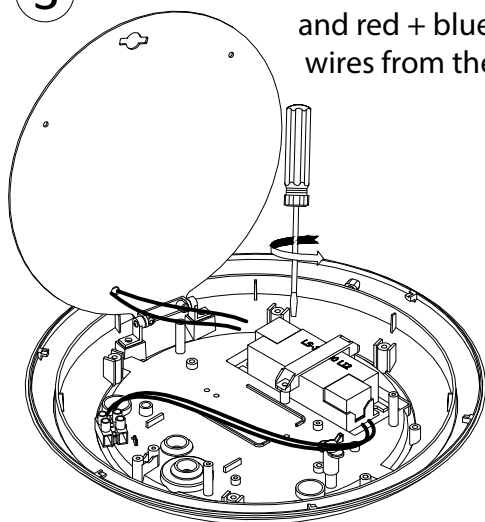


TOOL Screwdriver

- ④ Connect the red and black + blue and brown to the driver

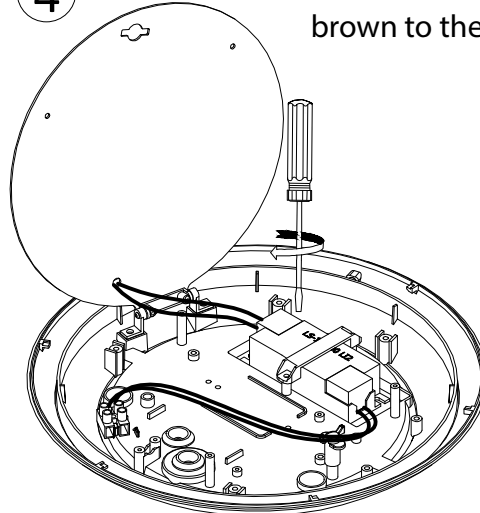


TOOL Screwdriver

- ⑤ Replace the LED board, fix it with the correct screws. Fix the thumbscrews

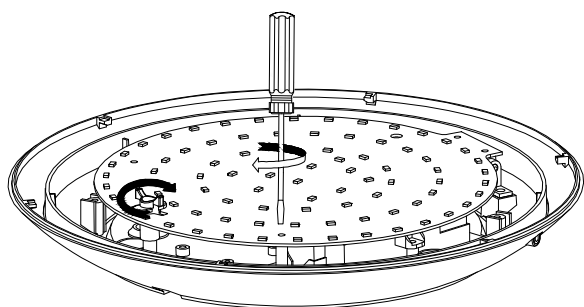

TOOL Screwdriver

- ⑥ Install the lamp cover.  
Fix the screw on the outside of the housing

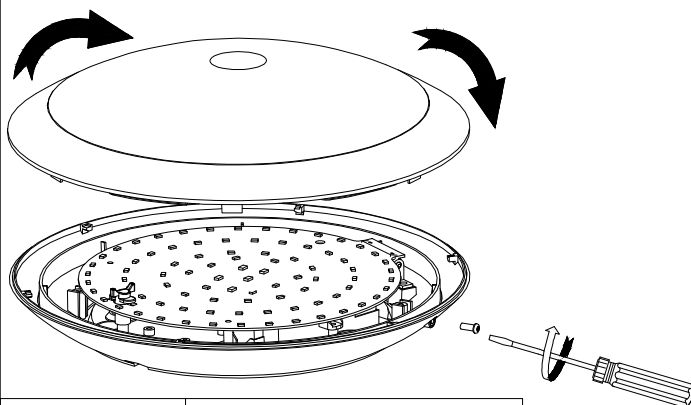

TOOL Screwdriver