



A. To replace the Driver follow steps
01, 02, 03, 04

B. To replace the LED mould follow
steps 05, 06, 07

