



A. To replace the Driver follow steps 01, 02, 03, 04

B. To replace the LED mould follow steps 05, 06, 07, 08

