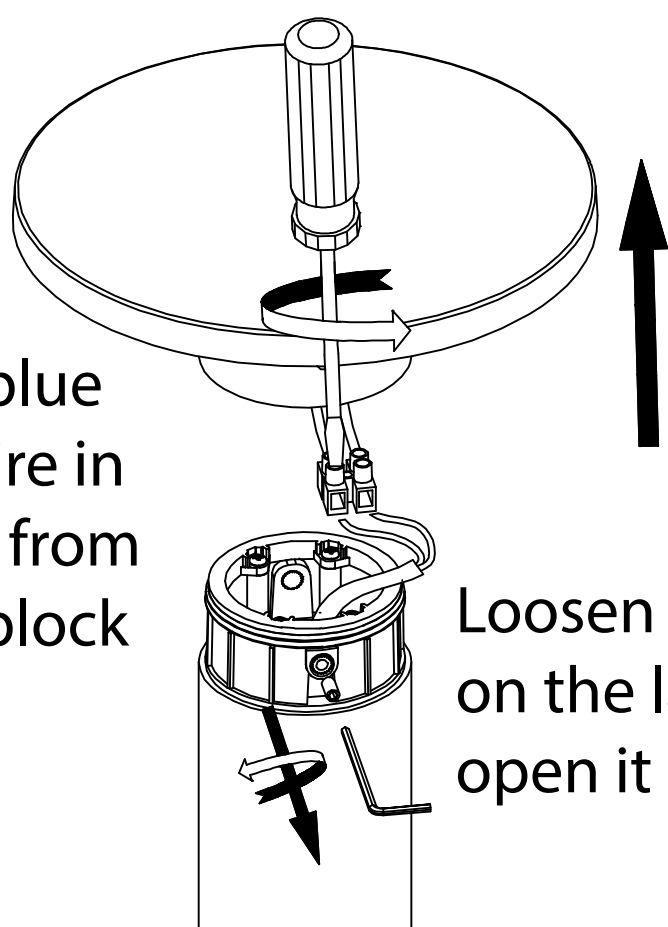① Take out the blue and brown wire in the lamppost from the terminal block

Loosen the screws on the lamp and open it

TOOL | **Wrench** **Screwdriver**

② Loosen the screws and take out the lamp lid
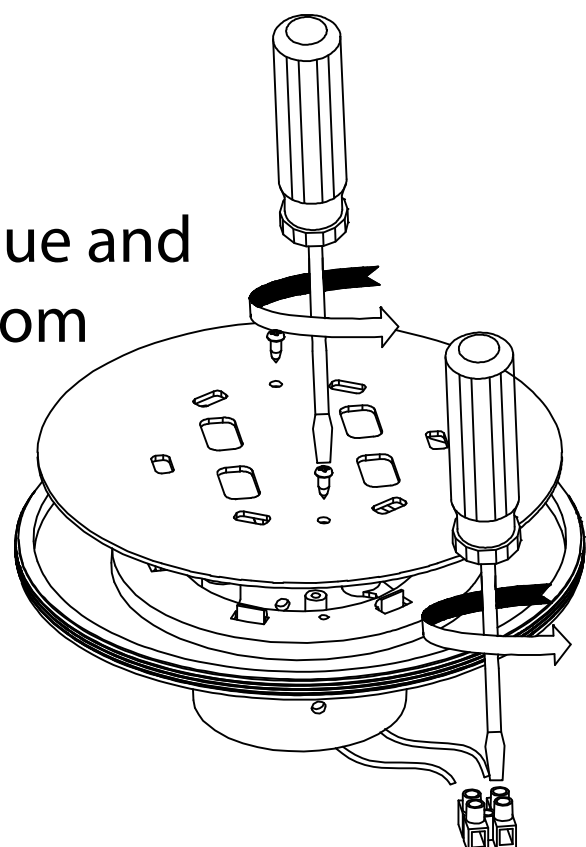
TOOL | **Screwdriver**

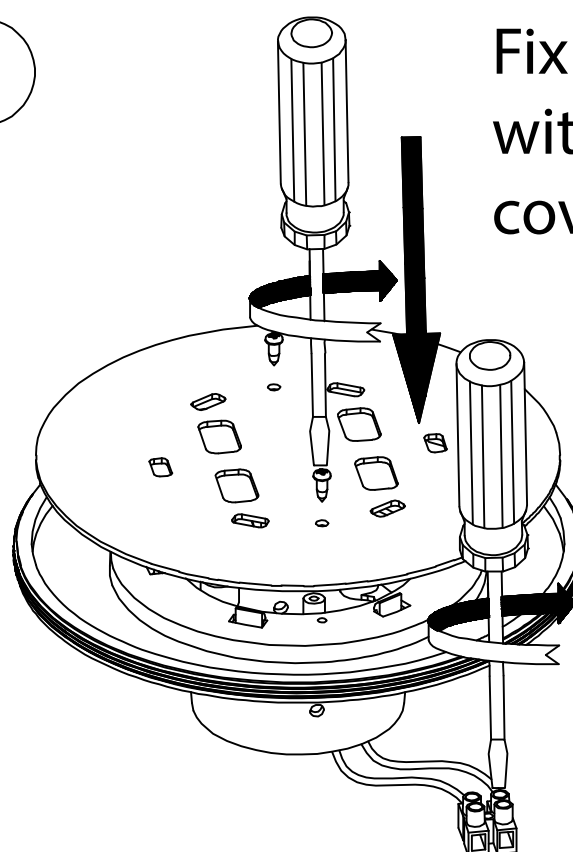③ Loosen the screws on the LED module

Remove the blue and brown wires from the terminal block

TOOL | **Screwdriver**

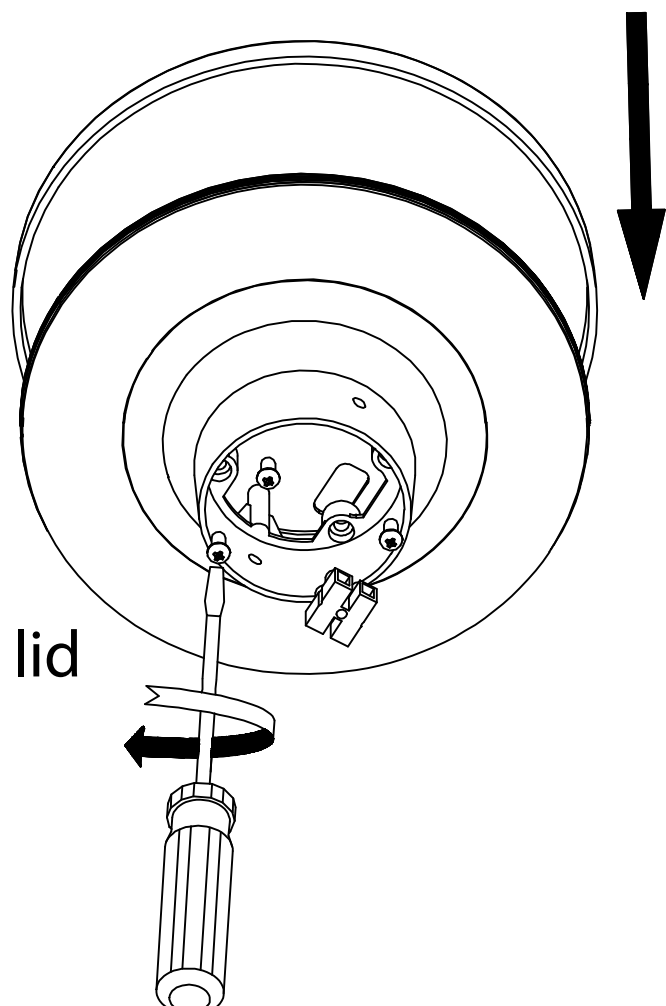④ Fix the new LED module with screws to the PC cover module

Connect the blue and brown wires to the terminal block
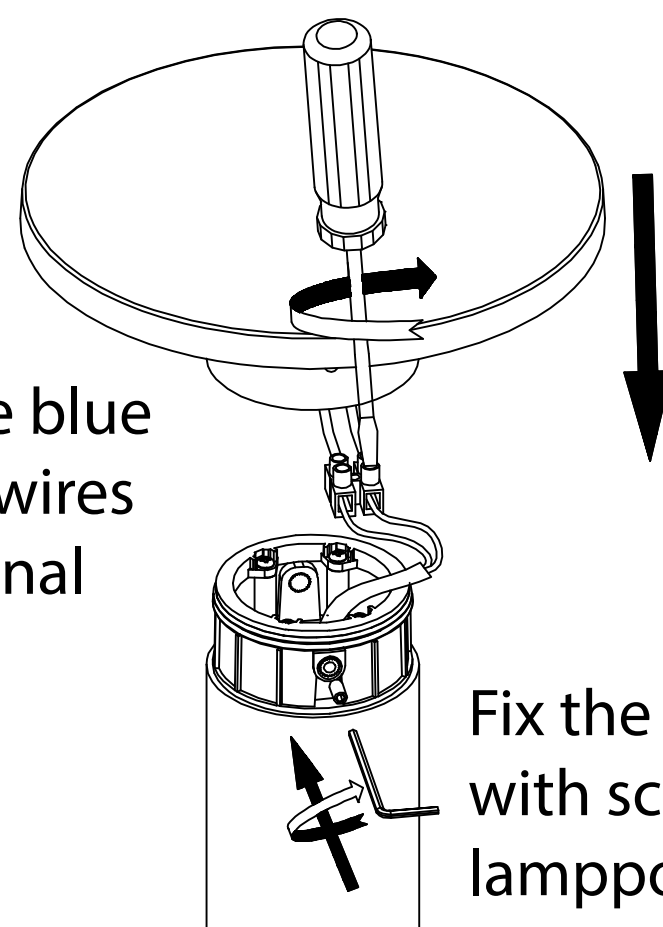
TOOL | **Screwdriver**

⑤ Fix the lamp lid with screws

TOOL | **Screwdriver**

⑥ Connect the blue and brown wires to the terminal black

Fix the lamp with screws to the lamppost

TOOL | **Wrench** **Screwdriver**